




This guide provides basic operation information for the TracPhone V3-HTS. For complete operation, setup, and diagnostics information, refer to the system's comprehensive Help, available on the Support tab of the TracPhone V3-HTS web interface. If you need any assistance, please contact KVH Technical Support.

Technical Support

North/South America, Australasia:
 Phone: 1 866 701-7103 (*U.S. only*)
 Phone: +1 401 851-3806
 Email: mvbsupport@kvh.com

Europe, Middle East, Africa, Asia-Pacific:
 Phone: +45 45 160 180
 Email: mvbsupport@kvh.com


Turning On the System

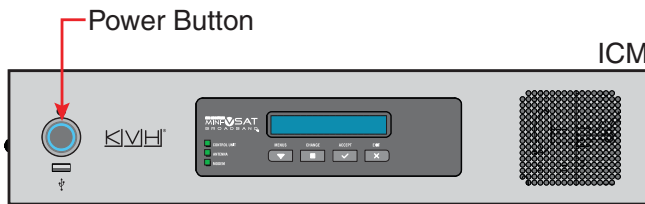

Press the power button on the ICM then wait 5 minutes for system startup. When the ICM indicates "Online," you can make a voice call or access the Internet using any device connected to the network.

The antenna requires a clear view of the sky. Objects such as bridges and boat masts can block satellite signals.

Caution – RF Radiation Hazard

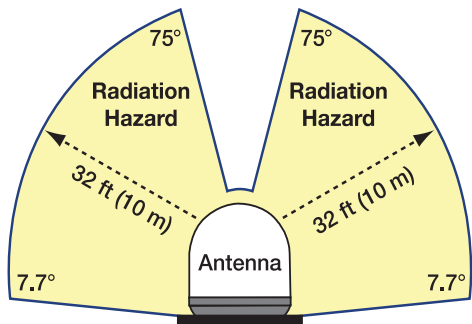

The antenna transmits radio frequency (RF) energy that is potentially harmful. Whenever the system is in use, make sure everyone stays more than 32 feet (10 m) away from the antenna. No hazard exists directly below the antenna.

You can program up to two no-transmit zones to prevent transmissions and protect people in accessible areas around the antenna. Refer to the Help for details.

Making a Voice Call

FROM the Vessel

How you dial depends on your Line 1 phone number.

To call outside the country assigned to Line 1:
 Dial <Int'l Prefix>+<Country>+<Area>+<Phone No.>

To call within the same country as Line 1:
 Dial <Area>+<Phone No.>

To call within the same country & area code as Line 1:
 Dial <Phone No.>


Int'l Prefix = International call prefix from Line 1 country

TO the Vessel

People on shore call your vessel by dialing your vessel's phone number. If they call within the same country code as the vessel's phone number, they may avoid international charges. If they call from within the same area code, they may avoid long-distance fees.

For a fee, you can choose the country code and area code of your vessel's phone number. You can also add "virtual numbers." For details, call KVH's Satellite Airtime & Product Activation department (*see www.kvh.com/mvbcustomercenter for contact info*).

Accessing the ICM's Web Interface

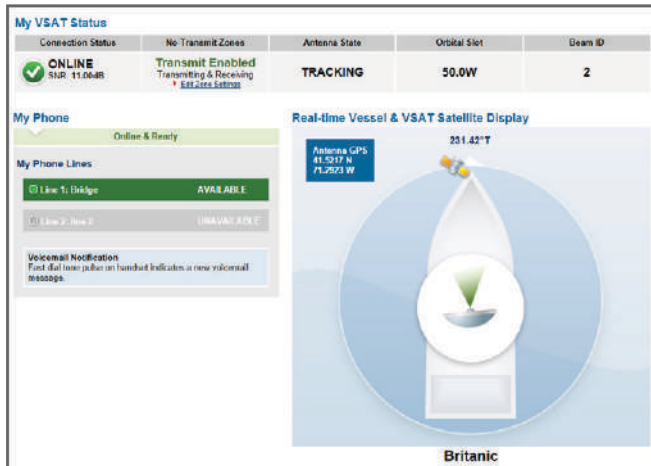


Connect to the vessel's network (the same network to which the ICM is connected). Then start your web browser and enter <http://minivsat.kvh>. If this doesn't work, enter the ICM's IP address (default is 192.168.5.1). You can find this address on the LCD: go to Settings > Network Settings > IP Assignments.

At the web interface, you can check system status, update software, and configure all aspects of the system.

You can also use the mini-VSAT iPhone®/iPod touch® app to view system status information and update software. Download the app for FREE from the Apple iTunes® store.

Accessing the mini-VSAT Manager at myKVH

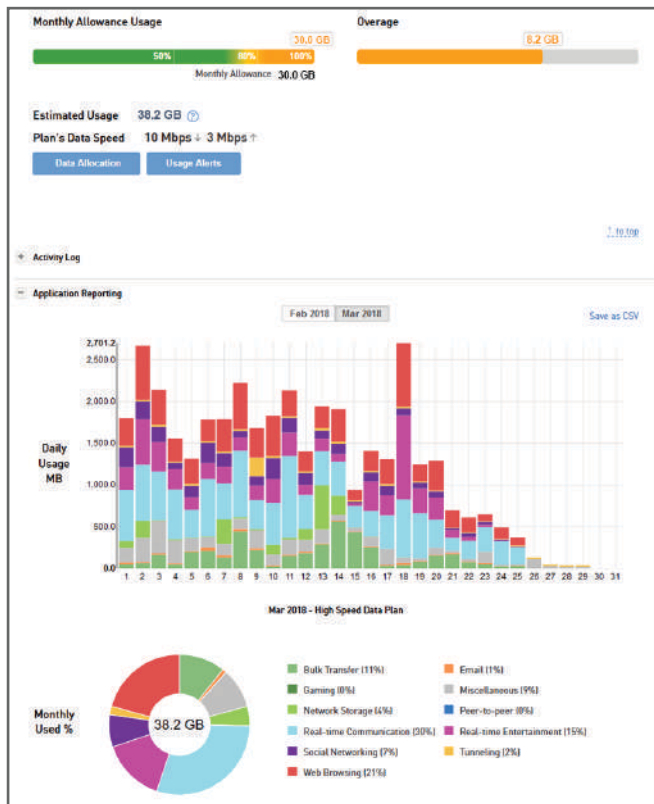

Open a web browser on any device connected to the Internet and enter www.mykvh.com. Then log in with the password KVH's Satellite Airtime and Product Activation Department provided to you.

The mini-VSAT Manager allows you to manage your vessel's network connections and usage from anywhere over the Internet. Specifically, it provides the following services:

- View vessel connection status, location, and data usage
- Set up data usage and overage alerts
- Establish daily, weekly, or monthly data allocations for each user on the vessel
- Change the ICM's network configuration and Wi-Fi settings
- View vessel track and speed data

Online Resources

Service Activation
www.kvh.com/mvbservice

Customer Support
www.kvh.com/mvbcustomercenter

Coverage Map
www.kvh.com/minivsatmap

Data Management
www.mykvh.com